

User Manual ► FEISOL CT-3342 and CT-3442

A. Mount and Center Column Installation

For exchanging mounts (flat Ball-Head mount / Center Column mount / Leveling Base) on the tripod, unscrew the three counter-sunk screws on top of the mainframe using the included Alan key (see picture), insert desired mount and re-tighten the three screws. To avoid possible damage to the screws or tripod, please do not over-tighten them.



B. Leg Tension Adjustment

Insert the two hexagonal wrenches (included) into the two screws at the base of the leg (see picture) and tighten or loosen them to the desired friction, by turning the wrenches in opposite directions.



C. Leg Extension

In order to extend a leg section, turn the twist-lock approximately one half turn in counterclockwise direction. Note: If the twistlock is turned too far, the leg section may fall out and compression rings may become lost or damaged.

To firmly lock a leg section into place, turn the twist-lock approximately one half turn in clockwise direction. Please do not over-tighten.



D. Weight Hook Installation

To increase tripod stability during windy conditions a Weight Hook is included, allowing for heavier objects (backpack, weight bags) to be attached to the tripod. The hook can be screwed onto the bottom plate of the pre-installed Center Column (see picture).



E. Ball-Head (optional) Installation

When using the flat mounting plate (pre-installed on models CT-3372 and CT-3472), screw the Ball-Head into the mounting screw by turning the Ball-head clockwise until it fits snugly. Please do not over-tighten.

When using a Center Column, making sure that the Center Column is securely locked, screw the Ball-Head onto the mounting screw by turning the Ball-Head clockwise (see picture). Please do not over-tighten.



F. Spike (optional) Installation

Remove the rubber caps on the end of the legs by twisting and working them forward – they fit snugly in order to prevent them from coming off accidentally. After they are removed, a thread is exposed at the tip of the leg, into which a long or short spike can be screwed (for use on scratch- sensitive surfaces, remove spike and replace rubber cap).



Please note that damage to your tripod's Carbon Tubes or Aluminum parts can occur when they dropped, squeezed, overloaded, or forced downward (eg. into sand dunes or snowbanks). Please exercise care to avoid such conditions.