

User Manual ► FEISOL UA-180 Mount

A. Description of the UA-180's Parts and Functions



1. Swivel Arm Lock Knobs

For locking and unlocking the Swivel arm. The right hand side wing nut and the left hand side wing nut are identical in function. For maximum hold, it is recommended that you tighten both wing nuts equally.

2. Panning Base Lock Knobs

For locking and unlocking the Panning Base mechanism. The right hand wing nut and the left hand wing nut are identical in function. For maximum hold, it is recommended that you tighten both wing nuts equally.

When unlocking the Panning Base Lock, turning the wing nut past the point of resistance may result in damage to the locking mechanism.

3. Lens Support Adjustment Knobs

For locking and unlocking the vertical position of the lens support base. Both knobs are identical in function and are used to move the lens support up and down as needed. For maximum hold, it is recommended that you tighten both knobs equally.

4. Quick Release Knobs

For tightening and loosening the Quick Release Plate on the Quick Release Clamp. Both knobs are identical in function. For maximum hold, it is recommended that you tighten both knobs equally.

5. Safety Lock

To safeguard the Quick Release Plate and camera/lens from falling accidentally. Push the pin to insert and remove the Quick Release Plate to/from the Quick Release Clamp.

B. Installation of 300mm or 400mm Quick Release Plates

The 300mm and 400mm Quick Release Plates are ideal companions to the UA-180 Mount. They offer an additional support-link between the camera/lens and the lens support system of the UA-180. Tighten the locking screws as shown in the picture (below). Do not tighten one screw after another, but take turns tightening all screws partly, little by little, applying equal force.



C. Lens/Camera Installation

Press the Safety Pin while mounting or detaching the Lens/Camera/QRP (Quick Release Plate) combination on the UA-180. To mount Camera/Lens/QRP, please slide the Quick Release Plate into the track of the clamp at an angle, starting at the top. After the Quick Release Plate has settled in the clamp, release the Safety Pin. To remove the Camera/Lens/QRP, press the Safety Pin and quickly take out the Release Plate at an angle.

